

## Fast Link Detection Configuration Commands

# Table of Contents

Fast Link Detection Configuration Commands.....	I
Table of Contents.....	II
Chapter 1 Fast Link Detection Configuration Commands.....	1
1.1 Fast Link Detection Configuration Commands.....	1
1.1.1 switchport enhanced-link.....	1
1.1.2 switch enhanced-link channel.....	2

# Chapter 1 Fast Link Detection Configuration Commands

## 1.1 Fast Link Detection Configuration Commands

### 1.1.1 switchport enhanced-link

#### Syntax

To enable fast link detection on the physical port or the aggregation port, run the following command. To disable fast link detection, use the no form of this command.

switchport enhanced-link

no switchport enhanced-link

#### Parameters

None

#### Default Value

If the port is set as the Ethernet ring port of the Ethernet ring protection protocol or the port backup characteristics such as FlexLinkLite is enabled, the fast link detection will be enabled automatically.

The port run STP and sets link aggregation function cannot be enable fast link detection automatically.

#### Command Mode

Uplink interface configuration mode

#### Usage Guidelines

Only the uplink interface can configure fast link detection.

#### Example

The following example shows how to enable fast link detection on port G0/1 and G0/2.

```
Switch_config# interface range G0/1 , 2
```

```
Switch_config_if_range# switchport enhanced-link
```

## 1.1.2 switch enhanced-link channel

### Syntax

To enable fast link detection on all aggregation ports, run the following command.  
To disable fast link detection on the aggregation port, use the no form of this command.

**switch enhanced-link channel**

**no switch enhanced-link channel**

### Parameters

None

### Default Value

If the aggregation port is set as the Ethernet ring port of the Ethernet ring protection protocol or the port backup characteristics such as FlexLinkLite is enabled, the fast link detection will be enabled automatically.

The port run STP and sets link aggregation function cannot be enable fast link detection automatically.

### Command Mode

Global configuration mode

### Usage Guidelines

None

### Example

The following example shows how to enable fast link detection on the aggregation port in global mode.

```
Switch_config# switch enhanced-link channel
```